


1 Single Stage (On/Off) Heaters with Auto Ignition, 1Ph to remote SmartCom³ SZ.

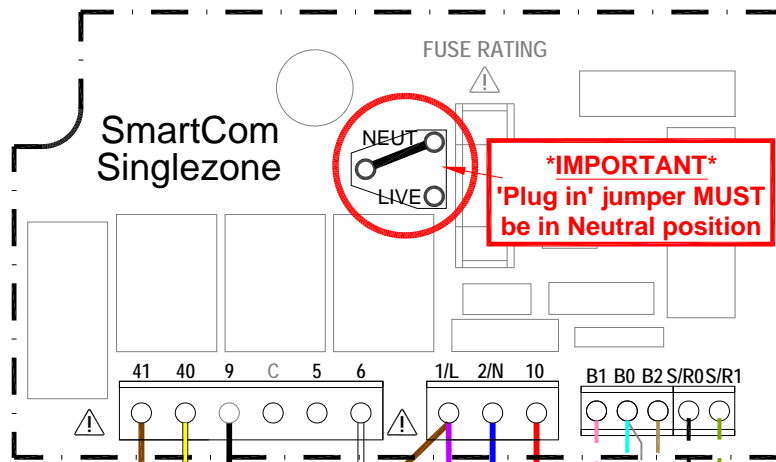

NOTES:

Controls cables min 0.75mm² cable for up to a distance of 200m.


REMOTE SWITCH INPUTS

should be connected by 6A mains Max length is 100m. Low voltage switching inputs to be normally open (closed circuit to enable). Connect to B0 & B1 for remote ON (ie BMS time control). Connect to B0 & B2 for remote OFF (ie door interlock. remote frost etc).

*The power supply is non-isolated, therefore all wiring to the control must be mains rated.

REMOTE SENSOR(s) may be placed at a max distance of 100m from the control unit, using screened 6A mains* cable. Wiring should be kept separate from mains wiring to minimise noise pick up. Set within Engineers functions for remote sensor.

*The power supply is non-isolated, therefore all wiring to the control must be mains rated.

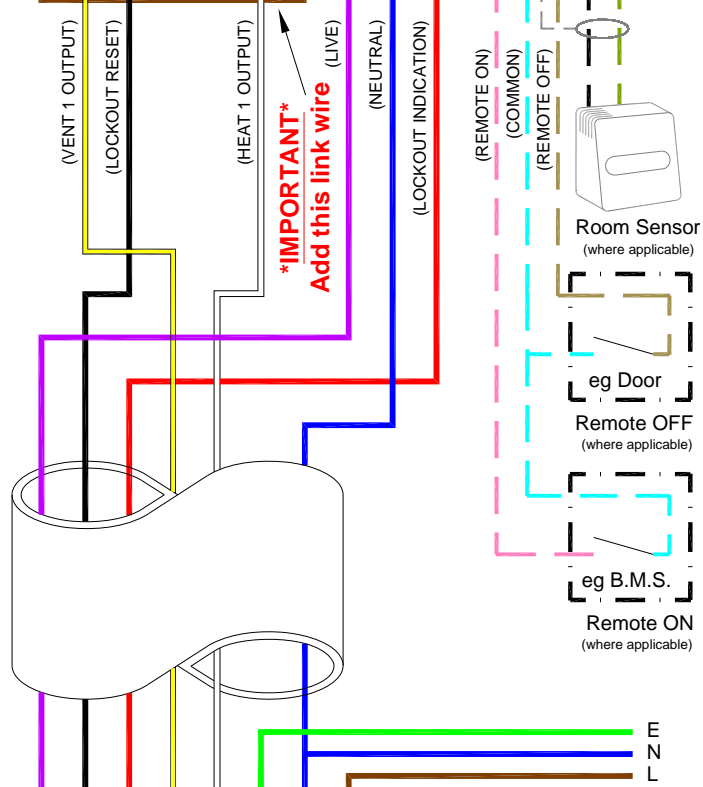

***IMPORTANT* Add this link wire**

***IMPORTANT* 'Plug in' jumper MUST be in Neutral position**



Non-interrupted mains supply must be present at the heater

